


HOW TO INSTALL YOUR ADDRESS SIGN

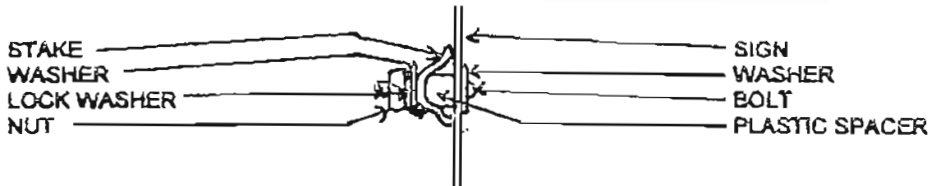


The top of the sign should be at least 49 inches above the ground. If placed next to a road, the top should be at least 49 inches above the level of the edge of the road.

BEWARE: Unless you are sure there are no buried utility cables under the site, call Miss Dig for a location check before driving the stake. 800-482-7171.

LOCATION


1. Next to a Driveway Off of a Road.

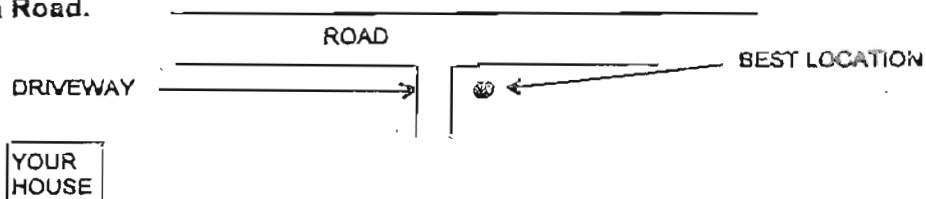

If your house has a driveway directly to the road, and there are no other houses on that driveway or forks in the driveway, the best location is on the right side of the driveway as you look out at the road. Road snow plows are less likely to cover it if located there. It should be about 8 feet back from the edge of the road if it is in a grassy area mowed by the County.


The important thing is that the sign be located where it can be easily seen from both directions. In some cases it may be more visible if installed on the left side of the driveway.

2. Driveway With a Fork

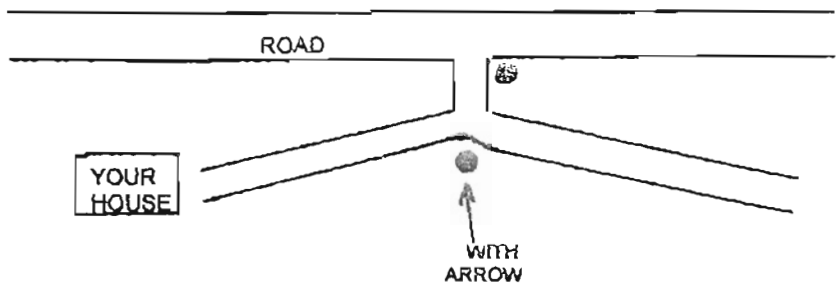

In this case two signs are required. One should be located at the road, as described above. The other should be located in the fork, as shown in the diagram. This sign needs to have an arrow on it, pointing in the direction of your house. If your installation needs an arrow it will be included with your numbers.

3. More Than One House on a Driveway

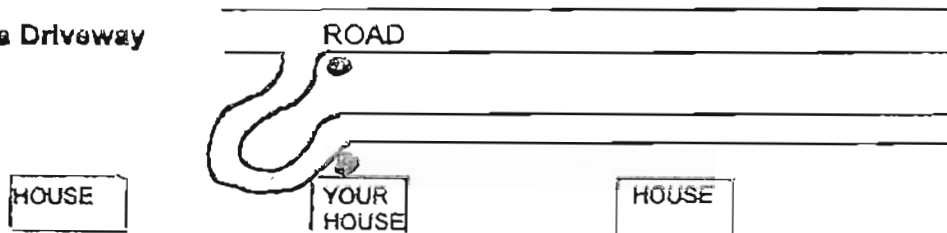

In this case two signs are required, one at the road and one at your house.

MUST BE ADJACENT TO YOUR DRIVEWAY.